

## Access – StormBrixx® HD




### Enter via the Access Chamber

This Access Chamber is only suitable for StormBrixx® HD. Access can be gained to the tank using the Access Chamber (B), or the Access Plate (see opposite). The Access Chamber can be installed both within the structure and along the outer edges. They require half the StormBrixx® cell (4 pillars) to be removed giving full access to the system. (See page 26)

For multi-layer systems, the chambers stack on top of each other and clip to the tank using the connectors. (See below)

Each Access Chamber can be cut out as required to accommodate various sizes of pipe up to DN300. Use a drill to get the saw blade inserted when creating the openings in the lower shaft section.

Access Chambers extend to the surface using circular rising shafts (1) or EzyBrixx square rising shafts.

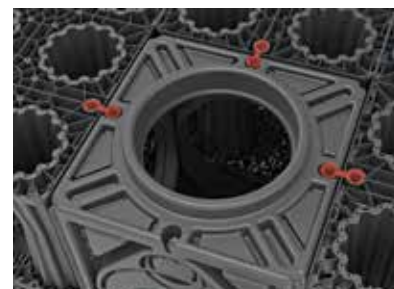

Cannot be used with StormBrixx® SD