

## Access – StormBrixx® SD



### Enter via the Access Plate

The Access Plate can be used to allow access to the StormBrixx® SD tank. The plate requires a half body cut piece (4 pillars) to be removed creating the free area within the structure. (See page 26)

With the Access Plate, an easy installation is possible at any desired position, except along the perimeter.

Access Plates (A) are to be connected to circular rising shafts as shown (1) or EzyBrixx square rising shafts.

**Caution:** Ensure the Access Plate is not installed on the perimeter edge of the tank but at least one unit (4 pillars) away from the edge.

Inspection cameras or jetting heads can be inserted vertically into the access shaft.

The Access Plate can also be used with StormBrixx® HD.

