


Side panel and top cover – StormBrixx® HD

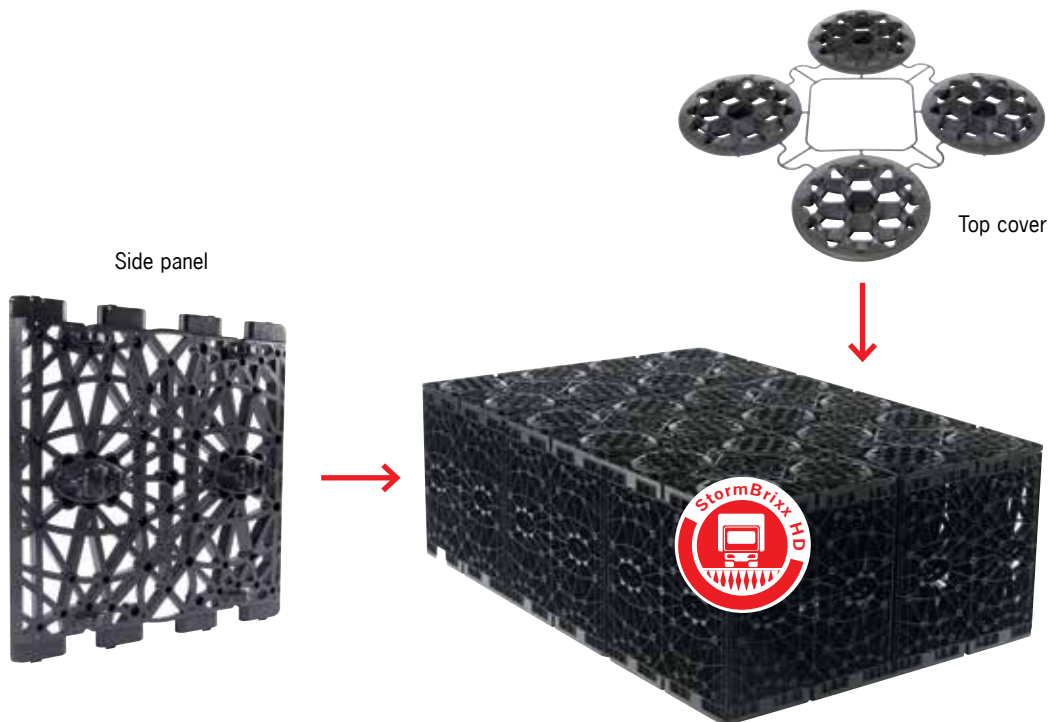

Installing the side panel

When installing the side panels you must ensure that the positioning tab is inserted into the base of the tank body first.



The outsides of the tank must be covered with side panels that click into place. These are inserted into the openings provided in the tank body elements. The side panels create a perimeter for the entire system offering a consistent surface for the geomembrane or geotextile. If needed, a pipe connection point can be cut out along the cutting guides in locations provided. Side panels have cutting guides for the connection of plastic pipes.

Installing the top cover

A single top cover closes off four pillar openings.



To ensure the geomembrane or geotextile can be wrapped around the tank snugly, covers should only be inserted in the top layer of the ACO StormBrixx® system. They prevent the geomembrane or geotextile being forced into the necks of the pillars during backfilling.

Note: Top covers are only placed in the top layer of the tank before the geomembrane and/or geotextile is wrapped around them.